

NEMCO FOOD EQUIPMENT

301 MEUSE ARGONNE, HICKSVILLE, OHIO 43526 PHONE (419) 542-7751

NEMCO Hot Plates

6310-1	6310-1-240
6310-2	6310-2-240
6310-3	6310-3-240
6311-1-240	6311-2-240

INSTALLATION INSTRUCTIONS

To Unpack:

- 1.) Remove the top packing pieces.
- 2.) Lift unit out of box.
- 3.) Remove any outside packaging.
- 4.) Remove the internal packaging.

Initial Setup:

- 1.) Remove the plastic coating from all stainless steel surfaces.
- 2.) Install the adjustable legs into the pre-threaded holes in the base of the unit. Unit must be operated with the legs provided.
- 3.) Clean unit with mild detergent and water. Be sure to dry unit.
- 4.) **CAUTION – To reduce the risk of fire, the appliance is to be installed in non-combustible surroundings only, with no combustible material within 18 inches of the sides, front, or rear of the appliance or within 40 inches above the appliance. The appliance is to be mounted on floors of noncombustible construction with non-combustible flooring and surface finish and with no combustible material against the underside, or on noncombustible slabs or arches that have no combustible material against the underside. Such construction shall in all cases extend not less than 12 inches beyond the equipment on all sides.**

Place the unit on a sturdy table or counter top and be sure it is out of reach from children.

“WARNING” During normal operation the exterior of the unit is **HOT**.

OPERATING INSTRUCTIONS

- 1.) Plug the unit into the appropriate power supply as indicated on the data plate.
- 2.) Adjust to desired temperature.
- 3.) After use, turn thermostat knob to off position.

Please Note: 120v models are not designed for saucepots over 4 quarts. They are designed for pan frying sautéing, or simmering.

MAINTENANCE AND CLEANING INSTRUCTIONS

Daily Cleaning:

- 1.) Unplug unit prior to cleaning.
- 2.) Clean unit with a mild detergent and warm water. Be sure to dry unit.
- 3.) Do not immerse in water.

Maintenance:

If unit fails to operate properly call NEMCO customer service at 1-800-782-6761

Service Parts List

45380	Pilot Light 120V (6310-1, 6310-2, 6310-3)
45495	Foot (6311-1-240, 6311-2-240)
45781	Pilot Light 220V (all 220V models)
46376	Cord Grip (6310-1)
46751	Cord Set (6310-1)
46789	Switch (all models)
46927	Leg Adjustable (6310-1, 6310-2, 6310-3, 6310-1-240, 6310-2-240, 6310-3-240)
46931	Knob, Thermostat (All Models)
47402	Cord Grip (6310-2, 6310-3, 6310-1-240, 6310-2-240, 6310-3-240, 6311-1-240)
47405	Cord Grip (6311-2-240)
47416	Cord Set (6310-2, 6310-3)
47417	Cord Set 240V (6310-1-240, 6310-2-240, 6310-3-240, 6311-1-240)
47434	Cord Set (6311-2-240)
67101	Element 240V 1500W (6310-2-240, 6310-3-240, 6311-1-240, 6311-2-240)
67102	Element 240V 2000W & 120V 500W (6310-2, 6310-3, 6310-1-240, 6311-2-240)
67306	Element 120V 1500W (6310-1, 6310-2, 6310-3)